



# SENSOR, CRANKSHAFT PULSE

## V46-72-0043-1

11604

### INSTALLATION INSTRUCTION

1. Cut the cable of the faulty crankshaft sensor and discard the dysfunctional sensor.
2. Remove approx. 1 cm cable insulation.
3. Shove sealed crimp splices on the cables A and B.
4. Connect the cables: A – A and B – B.

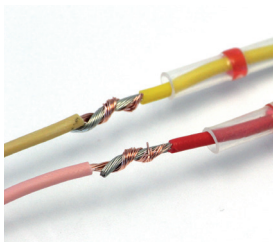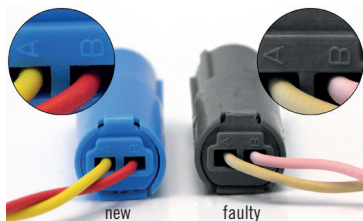



5. Move the sealed crimp splices to the connection and shrink the splices with a heat gun.
6. Connect the mating plug to the crankshaft sensor.

# IMPULSGEBER, KURBELWELLE V46-72-0043-1

11604

## EINBAUHINWEIS

1. Kabel des defekten Kurbelwellensensors durchtrennen und den funktionsunfähigen Sensor entsorgen.
2. Ca. 1 cm Isolierung an den Kabeln entfernen.
3. Schrumpferverbinder auf die Kabel A und B schieben.
4. Kabel miteinander verbinden: A – A und B – B.

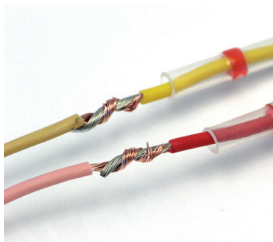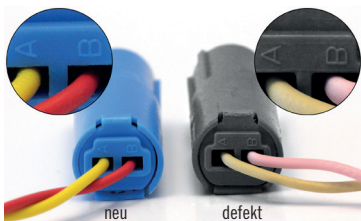

5. Die Schrumpferverbinder über die Zusammenführungen schieben und mit einem Heißluftföhn die Verbinder schrumpfen lassen.
6. Den Gegenstecker und Kurbelwellensensor ineinander stecken.